

Fabric Application Instructions:

BIG
wall décor



1) Start by folding one corner edge of the fabric so the silicone strip points down and the fabric wraps over it.



2) Insert one corner edge into the frame and press down. Then insert the opposite diagonal corner, followed by the other two.



3) Work from the middle on each side out to the ends until the graphic is evenly taut in the frame.



Fabric graphics can be machine washed in cold water on a delicate cycle, or dry-cleaned if preferred.



Woolite detergent is recommended for washing Fabric.



Once wash is complete, tumble dry on low heat/delicate setting.



Any wrinkles should subside after a day in the frame. A fabric steamer can also be used if needed. **DO NOT IRON.**