


BIG

wall décor

3.0" UNSPLICED HALF-LIT WALL MOUNTED FRAME

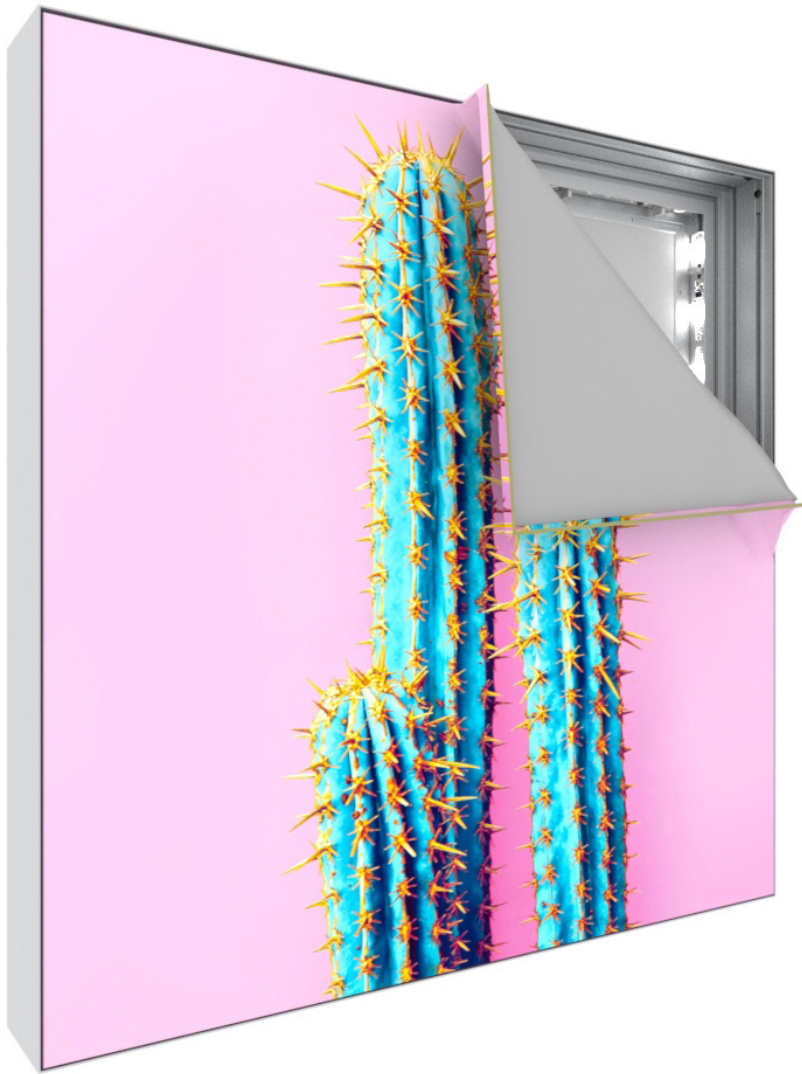

Assembly Guides:

1. 3.0" Unspliced - Frame Assembly
2. Half Lit - Lighting Assembly
3. Wall Mounting Assembly
4. ArtFab Installation

3.0" UNSPLICED - FRAME ASSEMBLY

BIG
wall décor



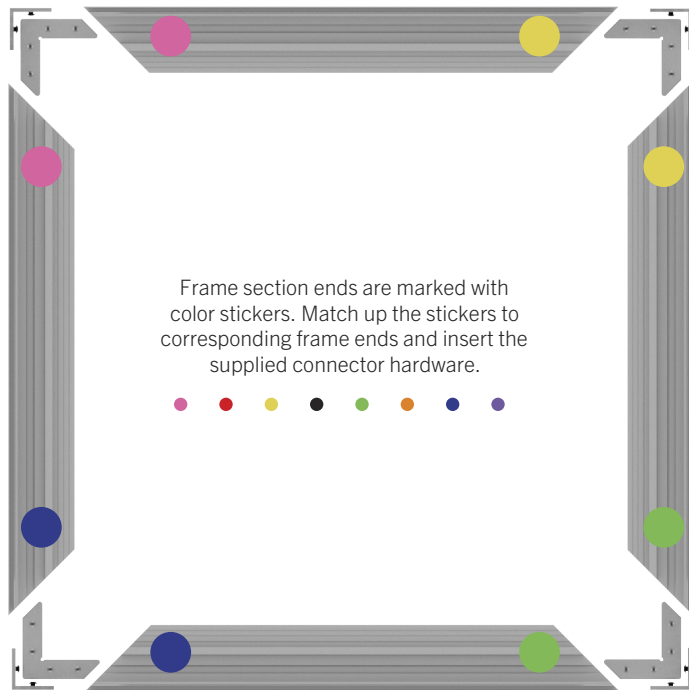


Figure 1

Cross-Section:

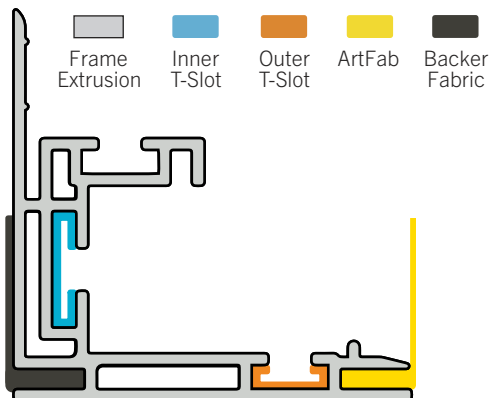

Supplied Hardware:

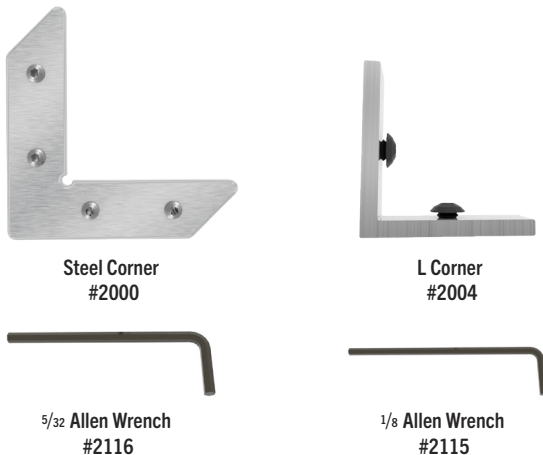


Step One:

Layout all Frame Assembly Hardware as shown in Figure 1.


Step Two:

Loosen Set Screws with the Allen Wrench on all Steel Corners so that they become flush. Loosen Buttonhead Screws with Allen Wrench on all L Corners so that they become flush.

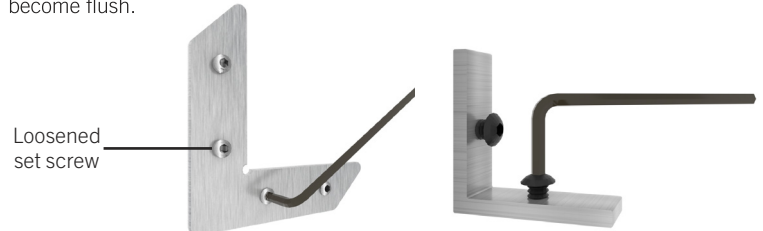


Step Three:

Start by assembling one corner of the frame at a time. Insert a Steel Corner into the frame's Inner T-slots (highlighted in blue). Next, insert an L Corner into the frame's Outer T-slots (highlighted in orange).

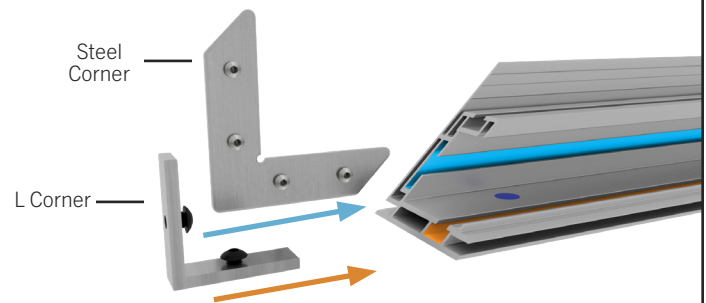

Step Four:


Once in place, tighten Set Screws on Steel Corners with the Allen Wrench just enough to catch. Tighten Buttonhead Screws on L Corners just enough to catch. Repeat step 3 until all four corners of the frame are loosely assembled.

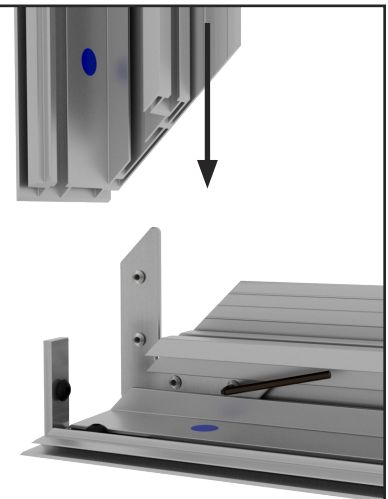

HALF LIT - LIGHTING ASSEMBLY


BIG
wall décor

Power Connection:

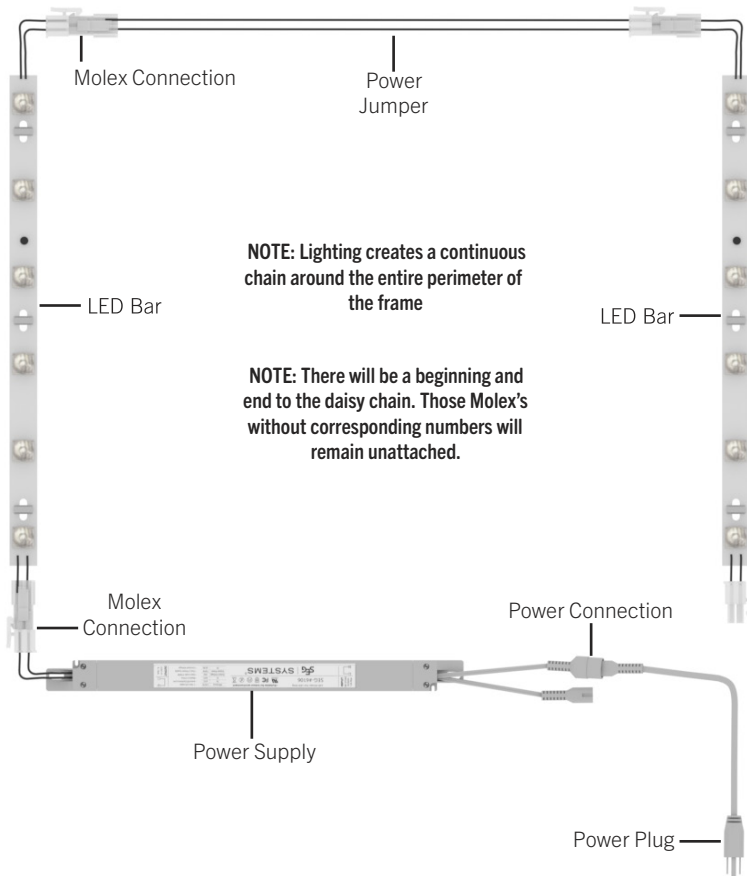

Step Two:

Insert the Power Plug into the nearest outlet for testing purposes. This will ensure that all of your lights are working properly before installing the rest of your frame and graphics.

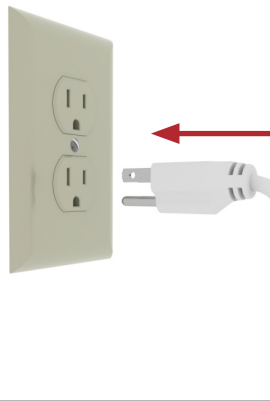

Step One:

Connect all corresponding Molex's around the frame with alike numbers written on them (i.e. 1-1, 2-2, 3-3 etc.)



Step Three:

Flip the lightbox so that you are looking at the back. Insert the backer fabric into the back groove of your frame.



BACK OF FRAME VIEW

DISCLAIMER

If LED's are missing or not lighting correctly please contact our team for further assistance.



WALL MOUNTING ASSEMBLY

BIG
wall décor


Supplied Hardware:



Drywall Anchor
#2140




5/8" Drywall Screw
#2140

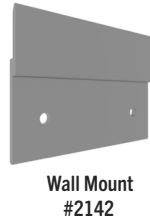

Wall Mount
#2142

Tools Required:

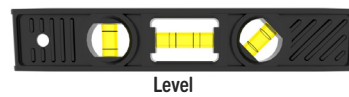

Level



Screwdriver or Power Drill




Pencil



Tape
Measure


Step One:

Once your frame is fully assembled, measure the distance between the top inside corners, this will be how far apart you place your wall mounts.

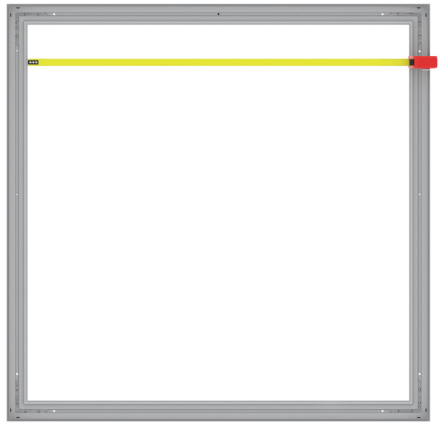


Step Two:

Place the wall mount on the wall at the desired position. Level the wall mount and mark the location of the holes to the wall.

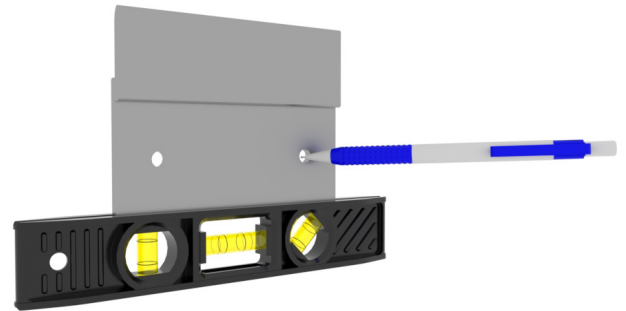

Step Three:


Center the point of the Drywall Anchor to the mark on the wall. Screw the anchor into the wall until it is flush to the face of the wall.

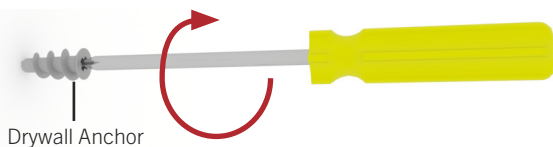

Drywall Anchor

Step Four:


When the anchors are installed, insert the included Drywall Screw through the wall mount and into the Drywall Anchor.

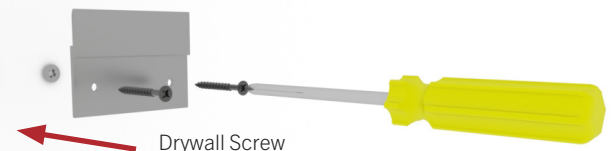


Drywall Screw

Step Five:


Slide the frame over top of the mounted wall mount, making sure that the inside corners of the frame are touching the wall mounts (this allows for more stability). The flange of your frame should be resting in between the wall and the wall mount.

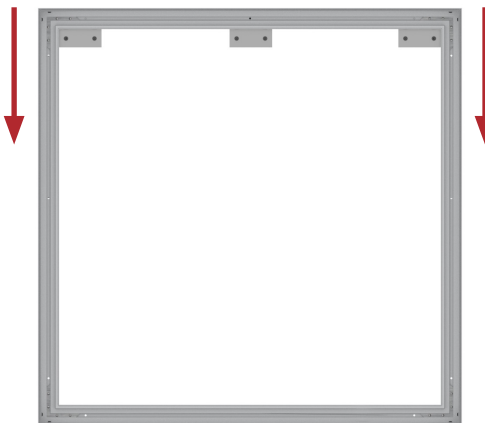

Cross Sectional View

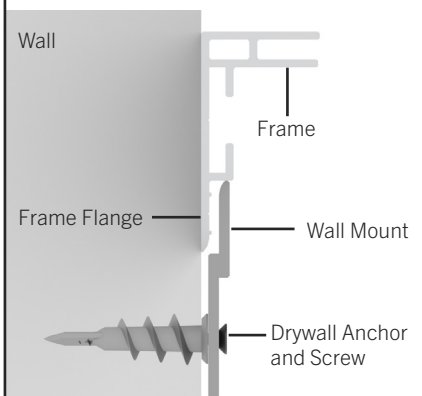


Step One:

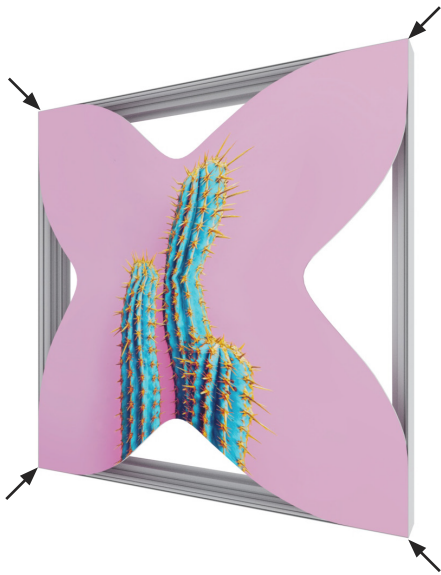

CORNERS

Insert one corner and then the opposite diagonal corner. Then insert the remaining corners.


Step Two:

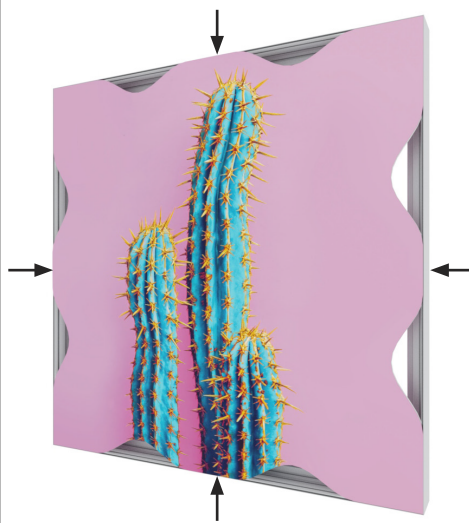

CENTERS

Work from the middle on each side out to the ends until the ArtFab is evenly taut in the frame.


Step Three:

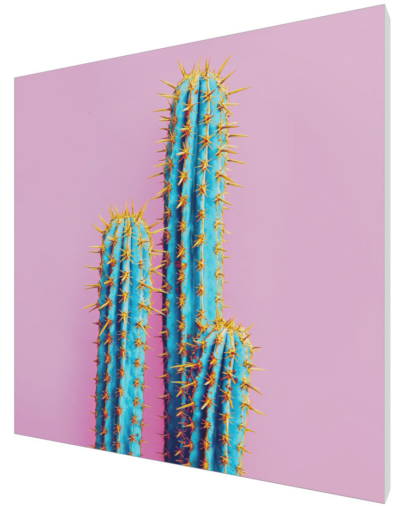


FINISH

ArtFab should be smooth and taut in the frame with no silicone showing.


Pro Tips:

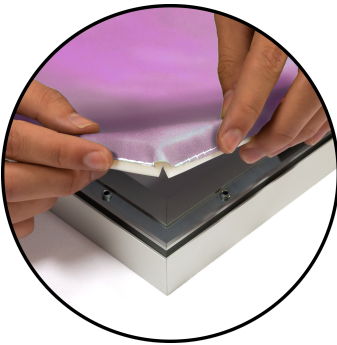

Start by folding one corner edge of the ArtFab so the silicone stripe points down and the ArtFab wraps over it.

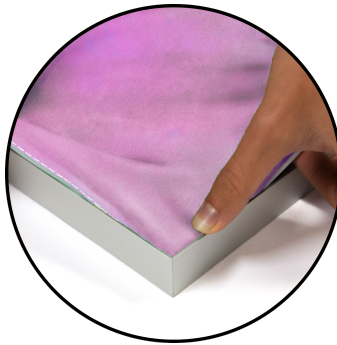

Insert the silicone strip into the channel on the front of the frame as shown.

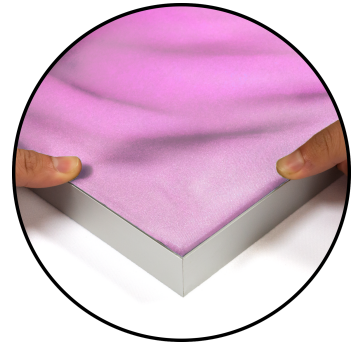

If the ArtFab is inserted correctly, the silicone strip will not be visible.